

OVERVIEW

EXO 8 is a cloud-connected area monitor that continuously measures gas concentrations in the ambient environment at sites, facilities, and fence lines. EXO activates notifications when concentrations of toxic and combustible gases exceed configured setpoints.


HARDWARE



EXO 8 DISPLAY

The Home screen conveys the current device status and event information through screen status and banner messages.

EXO's live readings screen displays real-time gas levels. EXO's dashboard screen displays alerts, calibration and bump due dates, and provides shortcuts to menu options, setpoints, and compliance operations.

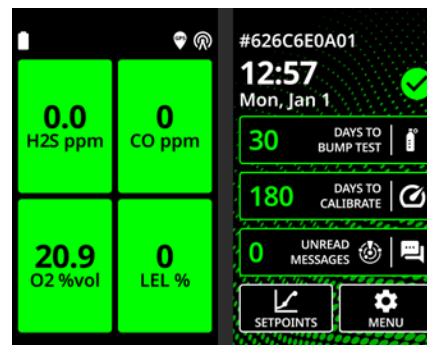

POWERING ON EXO 8

To power on EXO:

1. Press and hold the power button for two seconds. EXO emits a chime, the top lights flash, the screen displays the active features, and the green connectivity light goes solid, indicating EXO is connected.

If an **O₂ stabilizing** message displays on EXO's screen, it means EXO is not monitoring. Stabilization typically takes approximately 10 seconds but can take up to 20 minutes.

2. After you power on EXO and complete the startup sequence, EXO opens the main menu with Setup wizard selected.
3. Press the center button to start the Setup wizard.

EXO continues to monitor for gas during the Setup wizard. Low urgency notifications, an SOS latch pull, or dangerous gas levels override the Setup wizard.

CHARGING EXO 8

Use any of the following EXO accessories to charge EXO:

- Trickle charger
- Solar panel
- Quick charger

PLACING EXO 8

When placing EXO:

- Keep EXO upright and accessible.
- Do not hang EXO by its handle alone. Use the Hanging Mount Kit accessory.

MENU

Use EXO's menu to access functionality such as gas options, messages, settings, and advanced information.

There are two ways to open EXO's menu:

- Press the center button to open the main menu.
- From the Dashboard screen, use the left and right buttons to scroll and then select Menu by pressing the center button.

NOTIFICATIONS

EXO 8 communicates notifications using lights, sound, and an on-screen message specific to the event. You must acknowledge notifications and address the triggering conditions before they can be cleared from the device.

IMPORTANT: Always follow your company's safety protocol for responding to notifications. For low and high urgency notifications, Blackline Safety recommends leaving the area.

GREEN LIGHT

A flashing connectivity light indicates that EXO is trying to establish a connection to Blackline Live and is not yet transmitting data.

A solid connectivity light indicates that EXO is connected to Blackline Live and is actively transmitting data.

BLUE LIGHT

The blue LiveResponse light lets you know that remote monitoring personnel are responding to an alert by following your organization's emergency protocol. When monitoring personnel have confirmed the safety of everyone in the area and resolved the alert, the blue LiveResponse light turns off.

YELLOW LIGHT

Yellow lights indicate two types of notifications. Both types of notifications include yellow flashing lights, sound, and an on-screen message specific to the event.

Operational:

- Triggered by routine and expected device operations.
- Local to your device; monitoring personnel are not notified.

Low urgency:

- Triggered by an unexpected condition that could pose a safety risk if not addressed in a timely manner.
- Local to your device; monitoring personnel are not notified.

RED LIGHT

A red light at the top of your EXO device indicates a **High urgency** notification.

- High urgency notifications are triggered by events that require your immediate attention and action.
- If your organization is monitored, high urgency notifications are immediately communicated to monitoring personnel and automatically generate an alert in Blackline Live.

To acknowledge and mute a notification:

Press and hold the left and right buttons at the same time to mute the notification and acknowledge the banner message.

NOTE: For continuous gas exposure, EXO unmutes itself after two minutes for low urgency notifications and after one minute for high urgency notifications if detected gas levels have not returned to normal.



BUMP TESTING AND CALIBRATING

Bump testing and calibration verify that EXO's gas sensors and notification indicators are functioning correctly.

IMPORTANT: If you are bump testing or calibrating EXO Diffusion in a windy environment, you must use the wind guard.

**To bump test or calibrate EXO:**

1. Connect a gas cylinder to EXO's manual calibration inlet using calibration tubing.
2. From the Home screen, use the left and right buttons to scroll, and select **Days To Bump Test** or **Days To Calibrate**.

Or press the center button to enter the main menu. Select **Gas options**, and select **Bump test** or **Calibration**.

3. Confirm your selection by selecting **Yes**. EXO initiates an audio/visual self test.

Follow the screen prompts to complete the bump test or calibration, ensuring that you select the sensors you want to test. You are prompted to bump test or calibrate until the selected sensors have been tested.

LEARN MORE

Visit support.blacklinesafety.com to find support and materials for EXO, including the comprehensive [EXO Technical User Manual](#).

TECHNICAL SUPPORT

North America (24 hours)

Toll Free: 1-877-869-7212
support@blacklinesafety.com

United Kingdom (8am-5pm GMT)

+44 1787 222684
eusupport@blacklinesafety.com

International (24 hours)

+1-403-451-0327
support@blacklinesafety.com